




Tools and Products Required

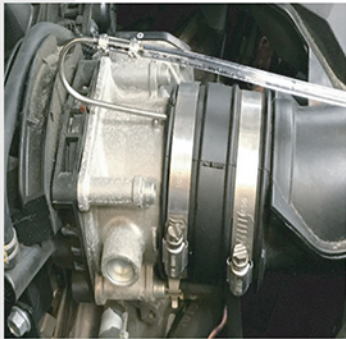


#1 Install "S" tool by loosening the intake duct at the throttle body inlet, slide tool between duct and throttle inlet pointing at throttle blade. Reinstall intake duct over throttle body inlet.

#2 Start vehicle and let engine reach normal operating temperature in a well-ventilated area.

#3 Set engine RPM with scan tool or pedal depressor to 1500-2000 RPM.

#4 Shake **Impact AI Power Foam (PS 8707)** can well and slide hose from "S" Tool over foam nozzle. Apply power foam in short bursts while maintaining target RPM.

Note: Both **Foam** and **TB Cleaner** may be applied direct to throttle body without "S" Tool if intake duct is removed.

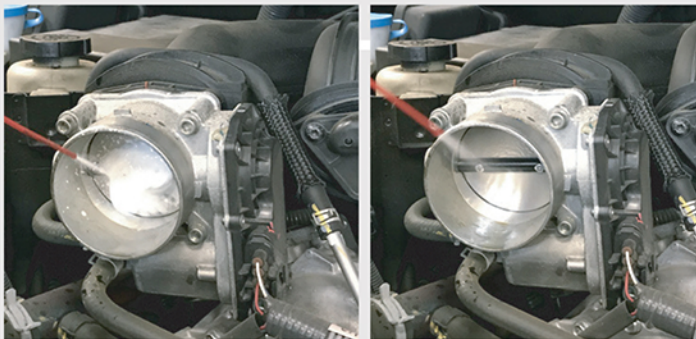

#5 After all of the power foam has been applied, switch "S" tool hose to **Air Intake TB Cleaner (PS 8709)** nozzle and apply in the exact same short bursts as the power foam until empty.

#6 Allow engine to maintain target RPM for another 1-2 minutes and then lower RPM to normal idle speed for another 1-2 minutes. Turn off engine and remove "S" tool from throttle body inlet and reinstall intake duct. Road test vehicle immediately following service completion for 3-4 miles.

#7 Add **Advanced Clean Up (PS 8702)** fuel system conditioner to fuel tank to complete service.

